

LCD Reader image upload

To upload new images to your LCD reader you will need a Net2Air USB dongle or Net2Air USB bridge



Download the free LCD reader image uploader software at:
<http://paxton.info/1521>

Sales code: 477-268-US
Description: Net2Air USB bridge
<http://paxton.info/1382>



Sales code: 380-592-US
Description: Net2Air USB Dongle
<http://paxton.info/1523>



LCD Reader image upload

To upload new images to your LCD reader you will need a Net2Air USB dongle or Net2Air USB bridge



Download the free LCD reader image uploader software at:
<http://paxton.info/1521>

Sales code: 477-268-US
Description: Net2Air USB bridge
<http://paxton.info/1382>



Sales code: 380-592-US
Description: Net2Air USB Dongle
<http://paxton.info/1523>

